 


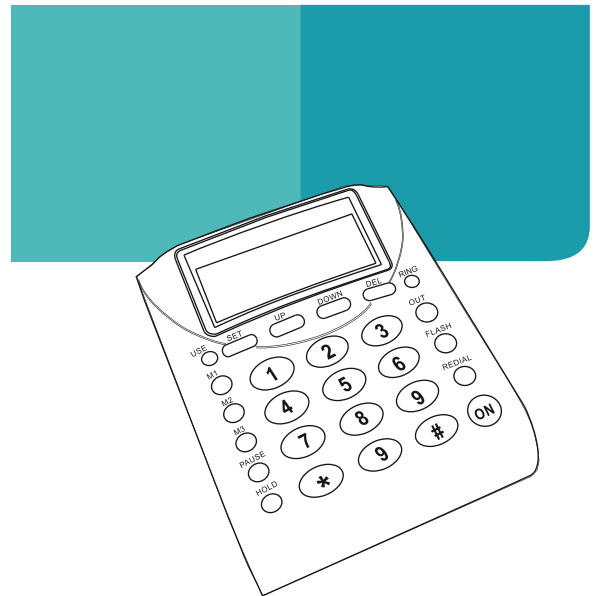

亚尔亚 VE800 话务电话

Headset & Telephone | 产品说明书



www.yeycom.com

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE

使用前请详细阅读本说明书

CONTENTS

1. INSTRUCTIONS.....	- 2 -
2. FEATURES	- 2 -
3. PACKAGING LIST	- 2 -
4. SKETCH MAP	- 2 -
5. INSTALLATION	- 3 -
6. SYSTEM SETTING OPERATION	- 3 -
6.1 SET DATE/TIME	- 3 -
6.2 SET LOCAL AREA CODE	- 3 -
6.3 SET AREA CODE	- 3 -
7. FUNCTION OPERATION	- 3 -
7.1 ANSWER A CALL	- 3 -
7.2 MAKE A CALL	- 3 -
7.3 RING SELECT	- 3 -
7.4 SPEAKER VOLUME ADJUST	- 3 -
7.5 FLASH FUNCTION	- 4 -
7.6 REDIAL FUNCTION	- 4 -
7.7 RECEIVING CALLER ID INFORMATION	- 4 -
7.8 CALLING BACK A NUMBER FROM THE CALLER ID LIST	- 4 -
7.9 REVIEWING THE CALLER ID LIST	- 4 -
7.10 DELETE FUNCTION	- 4 -
7.11 SETTING AND CHECKING VIP NUMBER	- 5 -
8. TROUBLESHOOTING	- 5 -

10. 删除功能

- 在待机状态下，按 DELETE 键用来删除输入错误的号码（改错）。
- 在显示来电或拨出号码时，DELETE 键用来删除该条来电，长按 DELETE 键 3 秒可删除所有来电或拨出号码。
- 在系统设置状态下 DELETE 键用来退出系统设置。

11. 贵宾设置

来电带有贵宾属性，在待机翻查来电号码时，按 PAUSE 键，可添加或取消相应号码的贵宾属性。贵宾号码以锁标记标识。设为贵宾的来电，在翻查时不能被删除。但是，用户如果长按 DELETE 键想全部删除来电或去电时，贵宾号码也可删除。如果来电存满又有新来电时，则话机会选择删除最前的非贵宾号码，此时日存满的号码全部都是贵宾，最前的贵宾号码仍然会被删除。

八. 简易故障排除方法

故障原因	检查方法	故障排除
无工作	检查二芯直线插头与外线是否连接好	把插头与外线连接好
无铃声或铃声小	检查是否有接分机，并检查分机的质量和并机数量太多 检查 RINGER 开关是否置于 HI 档位	排除分机法排除故障 如果置于 LOW 档，此时适合耳机接听，偏小属于正常
接听不正常	检查耳机是否为标准配备耳机	建议使用本公司标准配备耳机
通话音质不佳	检查连接线是否松动或连接线外皮有损伤 检查麦克风和嘴唇的距离	重新连接线并固定好，或更换连接线 调整麦克风的位置
无来电	当地电信局未开通来电显示业务或开通没有申请 对方号码保密	向电信局申请来电显示业务 显示保密属于正常现象

5. 拨号模式设置

此项功能保留。

6. 防盗设置

此项功能保留。

7. 闹钟设置

此项功能保留。

七. 功能操作说明

1. 接听电话

在手动接听电话状态下,电话响铃时,话机发出铃声,同时指示灯亮;此时按 ON 键开机接通电话进行通话,通话完毕后按 ON 键关机结束通话。

2. 拨打电话

在待机状态下拨打你需要的电话再按 ON 键,或按 ON 键听到忙音后拨打你需要的电话号码,此时工作指示灯亮,显示屏上显示相应的号码;通话完毕后按 ON 键关机结束通话。

3. 铃声设置

使用话机侧面的 RINGER 开关选择铃声,开关置于 OUT 位置时为外置铃声,开关置于 IN 时为内置铃声。

4. 喇叭音量调节

在通话状态下调节音量钮使喇叭音量适中。

5. 收线功能

按 FLASH 键配合交换机实现交换功能。

6. 重拨功能

- 在待机时预拨号,按 REDIAL 键话机将快速拨出预拨号码。
- 在查询状态下,查询到某个号码,按 REDIAL 键话机将快速拨出查询到的号码。
- 在开机状态下,按 REDIAL 键将会重拨最后一组电话号码。

7. 来电查询

在待机状态下,按 DOWN 键进入来电查询状态,配合 UP 键可向上和向下翻查,显示屏显示来电的号码、日期及时间等信息。

注:话机自动侦测并显示来电号码,同时显示来电的日期、时间,并记录这是第几个来电。如果是 FSK 制式,来电显示信号会自动刷新月、日以及时间的设置,而年的设置不变。对于 DTMF 制式,所有设置均不被改变。由于 DTMF 信号只含有来电号码,不含来电日期及时间。因此,系统收到 DTMF 来电号码时,会将已设置的日期及时间赋予该来电号码。显示屏同时显示来电序号。若是新号码,会有“NEW”标志同时出现。如果已有号码,则会有“REPEAT”标志出现。如果来电是保密,则显示屏会显示“---P---”,如果来电出范围,则显示“---O---”;如果来电信号不正确则显示“---E---”。

8. 来电回拨

按 DOWN 键进入来电查询状态,配合 UP 或 DOWN 键可向上/向下翻查,显示屏显示来电的号码、日期及时间等信息。查询到来电后,直接按 ON 键或 REDIAL 键,可对来电号码进行回拨;连续按两次 REDIAL 键,话机会在首位号码前自动加“0”进行长途回拨。

9. 去电查询

按 OUT 键可循环查询最近拨出的号码和通话时间。如果查到的号码要再次拨出,直接按 ON 键或 REDIAL 键即可。去电最多可存 32 位,如果号码超过 16 位时,手动翻查进行顺序查看。

1. INSTRUCTIONS

Thank you for your purchasing our newest telephone with Caller ID function. This manual is designed to familiarize with your phone. To get the maximum use from this product, we suggest that you read this instruction manual before operating it.

2. FEATURES


- FSK/DTMF dual system auto switch
- 38 group Caller ID message memories
- 5 group outgoing message memories
- 3 group one-touch dialing memories
- 5 digit of local area code
- 16 digits of number of incoming call display and backlight indication
- 15dB speakerphone volume number control
- Ringer of outside and inside option function, incoming call indication
- In use indication
- RJ-11 jack

3. PACKAGING LIST


- | | | | |
|---------------------------|------|---------------------|------|
| 1. Headset telephone | 1pc, | 2. Use manual | 1pc, |
| 3. Telephone line | 1pc, | 4. Headset (option) | 1pc, |
| 5. Bracket mount (option) | 1pc | | |

4. SKETCH MAP

 1. Set button
2. Up button
3. Down button
4. Delete button
5. Ringer indicator
6. Out button
7. Flash button
8. Redial button
9. On/off button
10. Number button
11. Hold button
12. Pause button
13. Headset jack
14. M3 button
15. Ringer out/in select
16. M2 button
17. M1 button
18. Volume adjust
19. In use indicator Pause button
20. Line
21. LCD display
22. Bracket mount jack

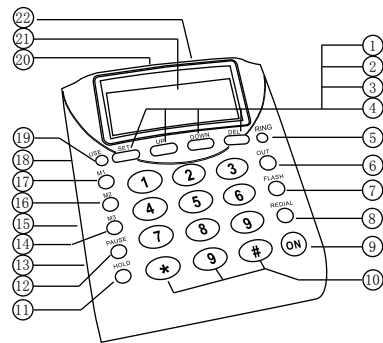

 23. Speaker
24. Microphone
25. Joint jack
26. Joint connection-peg
27. Telephone jack

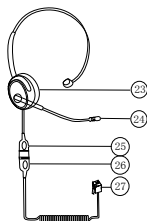

5. INSTALLATION

5.1 Plug one end of bracket mount to the jack of the base set

Note: when the batteries are installed, the screen will show 00:00 and the clock will begin to run. It will reset to the correct time when the first caller ID data is received.

5.2 Plug one end of flat cord to line jack

5.3 Plug one end of headset cord to the jack of the base set.

6. SYSTEM SETTING OPERATION

At standby state, press SET to enter the set at this time, LCD will display the item to set. Use UP or DOWN to select from the menu including Set Time/Date, Set Local Area Code, Set Area Code, Set Flash Time. Press DELETE to exit the setting menu.

6.1 SET DATE/TIME

When the LCD displays "SET 1 DATE", press SET to enter

- Press UP or DOWN to set the present year
- Press SET to confirm the year
- Use the same method to set month, day, hour and minute

6.2 SET LOCAL AREA CODE

When the LCD displays "SET 2 CODE", press SET to enter

- Use UP or DOWN to select the first digit of area code
- Press SET to confirm the first digit
- Use the same method to set the rest digits

6.3 SET AREA CODE

When the LCD displays "SET 3 PCODE", press SET to enter

- Use UP or DOWN to select the first digit of area code
- Press SET to confirm the first digit
- Use the same method to set the rest digits

7. FUNCTION OPERATION

7.1 ANSWER A CALL

When you hear the phone ring and the ringing indicator turns on, you have an incoming call. Press ON button to answer the call.

7.2 MAKE A CALL

 
Press the ON button, when you hear a dial tone, dial using the dial pad or memory buttons.

7.3 RINGER SELECT

Use the RINGER switch on the side of the base to adjust the ringer volume to OUT or IN.

7.4 SPEAKER VOLUME ADJUST

18. 喇叭音量调节
19. 工作指示灯
20. 外线插座
21. 液晶显示屏
22. 支架插空
23. 喇叭输出
24. 麦克风
25. 连接插座头
26. 连接插座接头
27. 电话插头

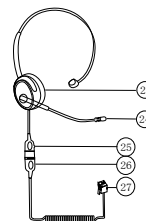

五. 安装方法

1. 电话线连接
连接电话线到底座电话线接口（LINE）。连接外线好后话机自动显示数字。
2. 连接耳机线
连接耳机线到底座耳机接口（HEADSET）。
3. 安装耳机支架（可选）
取耳机支架并将其插入到话机的耳机支架插孔内。

六. 系统设置操作说明

在待机状态下按SET键，进入系统设置状态，显示屏显示“SET 1 DATE”，此时，用UP或DOWN键可改变设置选项，显示屏同时显示对应的设置项目。再按SET键进入该项设置。在项目设置完成后，按SET键进入下一项设置。

注：在任何选项下按DELETE键退出系统设置回到待机状态，如果在3秒钟内没有按任何按键，系统将自动回到待机状态下。

1. 日期和时间设置

在待机状态下按SET键，显示屏提示“SET 1 DATE”，按SET键确认。进入日期和时间设置后，年的显示闪烁，可按UP或DOWN键修改日期，小时和分钟。小时和分钟的设置对十位和个位分别设置。按SET键确认分钟个位设置时话机会自动清秒，时间及日期设置完成后，显示屏会自动显示对应的星期以及当月挂历。同时系统跳到下一个系统设置选项。

注：FSK来电信号自动刷新原有的系统日期时间，DTMF来电信号对原系统时间，日期的设置没有影响。

2. 区域码设置

显示屏提示“SET 2 CODE”，按SET键确认，显示屏显示“CODE-----”，按SET键确认，进入区号的设置，第一个“-”闪烁（如果有设置过区号，则显示设置的区号，区号第一个号码闪烁）。按UP或DOWN键可设置或修改为0到9，完成第一位设置后，按SET键进入第二位设置，第三到第五位号码同上述步骤操作。设置完成后，系统将会跳到下一个系统设置。

3. 出局设置

显示屏提示“SET 3 PCODE”，按SET键确认，显示屏显示“CODE-----”，按SET键确认，进入区号的设置，第一个“-”闪烁（如果有设置过区号，则显示设置的区号，区号第一个号码闪烁）。按UP或DOWN键可设置或修改为0到9，完成第一位设置后，按SET键进入第二位设置，第三到第五位号码同上述步骤操作。设置完成后，系统将会跳到下一个系统设置。

4. 自动IP设置

此项功能保留。

一. 产品简介

本耳机电话采用独特设计方式,使产品具有高清晰,高保真的语音通讯,功能齐全,性能稳定,适用于各种交换机系统,是理想的办公电话。

二. 功能特点


- 高清晰语音通讯;
- 自动检测电信局来电制式 (FSK / DTMF) ;
- 38组来电查询;
- 5 组去电查询;
- 来电,去电可设置为 VIP 功能,防删除电话号码功能;
- 5 位区域码来电过滤;
- 1 位出局码适应虚拟网;
- 32 位预拨号及改错;
- 16 位 LCD 拨号显示及电子台历显示功能;
- 15dB 接收喇叭, 数码音量调节;
- 外置铃声和内置铃声选择功能;
- 开机背光灯指示功能;
- 提供 RJ-11 耳麦接口;

三. 包装附件明细

- | | | | |
|--------------|----|------------|----|
| 1. 耳机电话 | 一台 | 2. 使用说明书 | 一本 |
| 3. 电话连接线 | 一条 | 4. 耳机 (可选) | 一个 |
| 5. 耳机支架 (可选) | 一个 | | |

四. 示意图

 1. 设置键
2. 上翻键
3. 下翻键
4. 删除键
5. 铃声指示灯
6. 去电键
7. 收线键
8. 重拨键
9. 开/关机键
10. 数字键
11. 保留键
12. 暂停键
13. 耳机插座
14. 记忆3键
15. 铃声内外选择开关
16. 记忆2键
17. 记忆1键

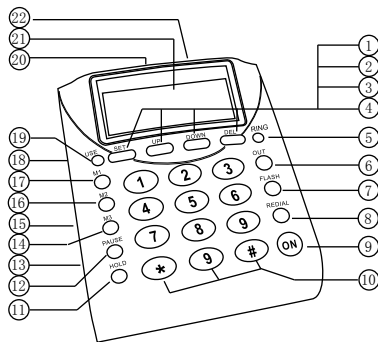

Use the volume switch on the side of the base to adjust the speaker volume.

7.5 FLASH FUNCTION

Press the FLASH button to get special service such as 'Call Waiting' or "3-way calling".

7.6 REDIAL FUNCTION

Press the ON button, then press the REDIAL button, the latest dialed number will be dialed out.

7.7 RECEIVING CALLER ID INFORMATION

Note: You must make sure your Telephone Company offer caller ID service so that the caller ID function can be activated.

When there is an incoming call, the LCD will display the number, area code, time and date of the call. When receiving a telephone call, the telephone will detect the FSK or DTMF format and display the calling number. If this is a FSK format caller ID signal, the current date and time display will also be updated. If this is a newly coming call, the "NEW" icon will be displayed. If the incoming call is a repeat number, the "REP" icon will be displayed. If the incoming call is a private call, the icon ---p--- will be displayed. If the incoming call is out of area, the icon ---o--- will be displayed. If a wrong number comes in, the ---E--- will be displayed.

7.8 CALLING BACK A NUMBER FROM THE CALLER ID LIST

Under standby state, use UP and DOWN to select the desired number.

- If the area code was set and the incoming call is 7 digits, press REDIAL once to keep showing 7 digits, press REDIAL twice to show 10 digits with adding 3 digits area code, press REDIAL three times to show 11 digits with adding area code and long distance code '1' as the first digit. Pick the handset to dial out the displaying number.
- If the incoming call is 10 digits, press REDIAL once to show 11 digits with adding long distance code '1' as the first digit. Press REDIAL twice to show 10 digits and press REDIAL three times to show 7 digits to eliminate the area code. Pick the handset to dial out the displaying number.

Under in-use state, use UP and DOWN to select the desired number. Press REDIAL and the displaying number will be dialed out automatically after 2 seconds.

- If the area code was set and the incoming call is 7 digits, press REDIAL once to keep showing 7 digits, press REDIAL twice to show 10 digits with adding 3 digits area code, press "REDIAL" three times to show 11 digits with adding area code and long distance code '1' as the first digit. Waiting for 2 seconds and the displaying number will be dialed out automatically.
- If the incoming call is 10 digits, press REDIAL once to show 11 digits with adding long distance code '1' as the first digit. Press REDIAL twice to show 10 digits and press REDIAL three times to show 7 digits to eliminate the area code. Waiting for 2 seconds and the displaying number will be dialed out automatically.

7.9 REVIEWING THE CALLER ID LIST

Press UP or DOWN to review the outgoing calls (at most 16 calls)

7.10 DELETE FUNCTION

- In set mode, press DELTET button is used to quit set.
- When you use pre-dial function, press DEL button is used to correct the input mistake.
- When you check the incoming calls memories, press DELETE button is used to delete the unwanted memory. If you press DELETE button and to not release for more than 4 second, all memories will be deleted,

目 录

一. 产品简介.....	- 7 -
二. 功能特点.....	- 7 -
三. 包装附件明细.....	- 7 -
四. 示意图.....	- 7 -
五. 安装方法.....	- 8 -
六. 系统设置操作说明.....	- 8 -
1. 日期和时间设置.....	- 8 -
2. 区域码设置.....	- 8 -
3. 出局设置.....	- 8 -
4. 自动IP 设置.....	- 8 -
5. 拨号模式设置.....	- 9 -
6. 防盗设置.....	- 9 -
7. 闹钟设置.....	- 9 -
七. 功能操作说明.....	- 9 -
1. 接听电话.....	- 9 -
2. 拨打电话.....	- 9 -
3. 铃声设置.....	- 9 -
4. 喇叭音量调节.....	- 9 -
5. 收线功能.....	- 9 -
6. 重拨功能.....	- 9 -
7. 来电查询.....	- 9 -
8. 来电回拨.....	- 9 -
9. 去电查询.....	- 9 -
10. 删除功能.....	- 10 -
11. 贵宾设置.....	- 10 -
八. 简易故障排除方法.....	- 10 -

- When you check the outgoing calls memories, press DELETE button is used to delete the unwanted memory. If you press DELETE button and do not release for more than 4 second, all memories will be deleted.

7.11 SETTING AND CHECKING VIP NUMBER

You can set some important numbers in the Caller ID list to VIP numbers. The VIP number will not be flush away by the newly coming number when the memory is full.

- When standby state, press UP or DOWN button to select a number.
- Press PAUSE button, this selected number becomes VIP number. If a number is set as VIP, the LCD will show a “LOCK” icon. You can set as many as 62 VIP numbers.
- For a VIP number, press PAUSE again to cancel the VIP setting.

8.TROUBLESHOOTING

Trouble	Check-up	Trouble remove
No in-use	Check telephone line	Connect telephone line
No ringer or ringer LOW	Check telephone for outside tel. Check ringer switch select HI	Remove outside tel.
Receiving abnormality	Check headset	Replacing headset
Tone abnormality	Check telephone line for not hard up	Replacing telephone line
No caller ID	Check a make sure your Telephone Company offer caller ID service.	You must make sure your Telephone Company offer caller ID service so that the caller ID function can be activated.